


1.25" Pipe 2v –Dome Kit Assembly Instructions

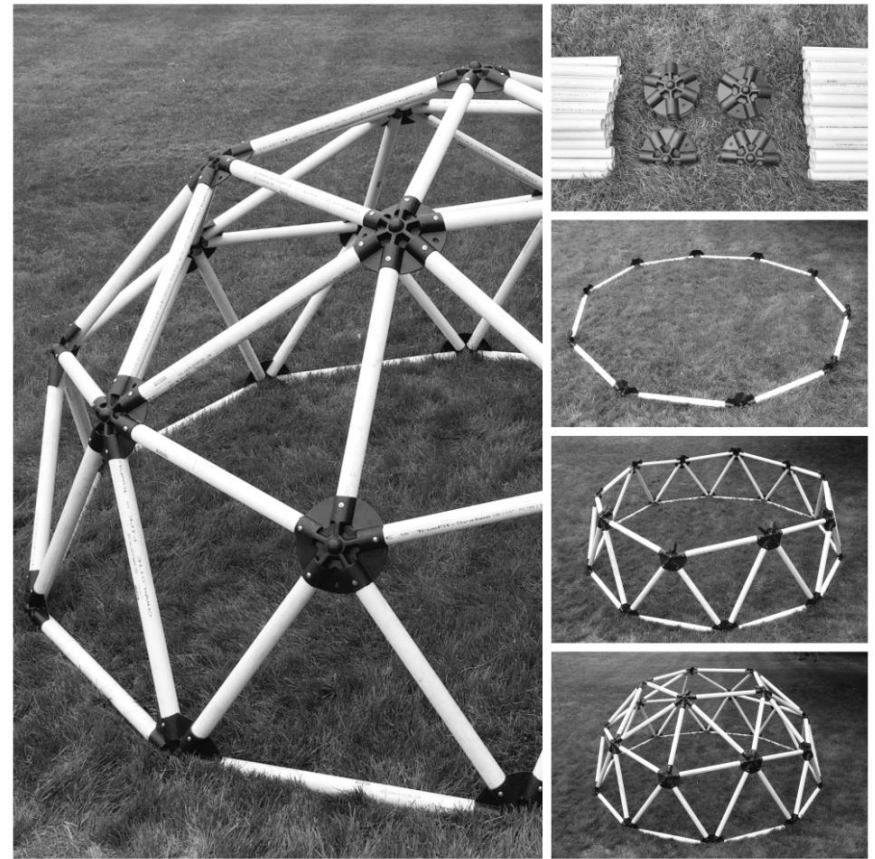





Contents

Parts List	4
Recommended Resources	5
Site Preparation Guide	5
Riser Wall Guide	7
Strut Preparation.....	8
Hub & Strut Location Identification	9
Dome Frame Construction	9
Sheathing Guide	14
Paneling Guide	15

Parts List

All Natural Frequency Hubs, due to their generally identical look, are identified by an alphanumeric numbering system. Located on the underside of every hub you will find impressions that identify the hub as far as identification of which strut is associated to each location in the hub. Hubs may appear different based on type of strut used (2x4 Lumber hubs shown)

PART#	DESCRIPTION		QTY
2v1	5 STRUT HUB (5x Assembled & 1x Keystone Hub Set)		6
2v2	6 STRUT HUB		10
H2v2A	BASE ROW HUB A		5
H2v2B	BASE ROW HUB B		5

Recommended Resources

- 1-2 People
- Struts (See Strut Preparation section below for sizing and quantity)
- Measuring Tape
- Ground Stake
- String (appropriate amount based on size of dome)
- Spray Paint or other ground marking method for base row layout
- Colored Spray Paint or other marking method for Struts
- Power Drill with bits
- Scaffolding (appropriate amount based on size of dome, highest point will be ½ the desired diameter plus any riser wall)
- Step Ladder(s)

NOTE: Natural Frequency only provides the hub connectors and accessories for construction. The guides herein related to site preparation, riser walls, sheathing/paneling/covering are for information purposes only related to the interaction and relationship to our hub connectors and are not a substitute for expert advice on construction methods of these subjects.

Site Preparation Guide

1. Choose an area where you would like the dome to be constructed. Things to keep in mind for site selection are:
 - a. Sun Exposure/Shade Considerations based on dome use/function
 - b. Water runoff
 - c. Grade angle
 - d. Window Locations
2. Clear the area of rocks, foliage, grass or any other item that may interfere with leveling or the functionality of the dome
3. Determine Site Preparation and Anchoring method, this could include:
 - a. **Crushed Stone**
A crushed stone base, 4-5" deep, is one of the best ways to prepare your site. Be sure and use "crushed" stone as opposed to "pea" stone. 1/2" is a good diameter and is relatively inexpensive. Place your dome in the center of the pad leaving a minimum of 1' perimeter of stone around the shed. When digging out the area to accept the stone, start at the lowest area and establish the grade by digging down 4-6". You can now excavate the rest of the site keeping in mind the site should be level when finished.
 - b. **Sono Tubes**
Also known as concrete piers are great for a strong anchor
 - c. **Wooden Post**

Typically 4x4 posts placed in the ground, this method is a great way to provide a strong structure that is easily framed too. It is important to use pressure treated timbers for the posts.

d. Cement Slab

A cement slab is one of the more expensive ways to prepare your site, however if done correctly it can also be the best. A slab will keep the dome level and prevent grass and weeds from growing both under and around it. It also offers many options for anchoring the dome.

e. Ground

You may also decide to simply place your dome directly on the ground. It is important that the shed has pressure treated timbers used where there is contact with the ground

f. Riser Wall


See next section below.

4. Prepare the site using recommended processes depending on method chosen


Riser Wall Guide

- In general the use of a riser wall is to gain vertical height. That raised addition helps create vertical walls for doors, cabinets, windows, sinks etc.
- Riser Walls can be constructed from poured concrete, cinder block or wood.
- Sizing for the riser wall can be found below for each individual dome diameter, the "D" dimension is to the outside of the framing members
- The outer points of each pipe should lay on a scribed circle the diameter of the dome to be constructed
- Each horizontal pipe cut to the "D" length below must be tapered by 18 degrees inward on each end.

**For a 26 ft Dome, the riser wall strut dimension is slightly over 8 ft standard lumber length, just be aware that there will be a small gap between pipes to maintain the outside dimension of 26 ft if using 8 ft pipes.*

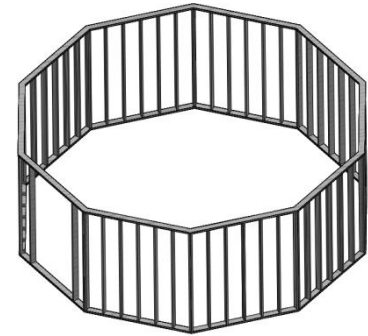

Riser Wall Strut Length (inches) "D"		
DOME DIAMETER (feet)	8	29.6875
	9	33.375
	10	37.0625
	11	40.8125
	12	44.5
	13	48.1875
	14	51.9375
	15	55.625
	16	59.3125
	17	63.0625
	18	66.75
	19	70.4375
	20	74.1875
	21	77.875
	22	81.5625
	23	85.3125
	24	89
	25	92.6875

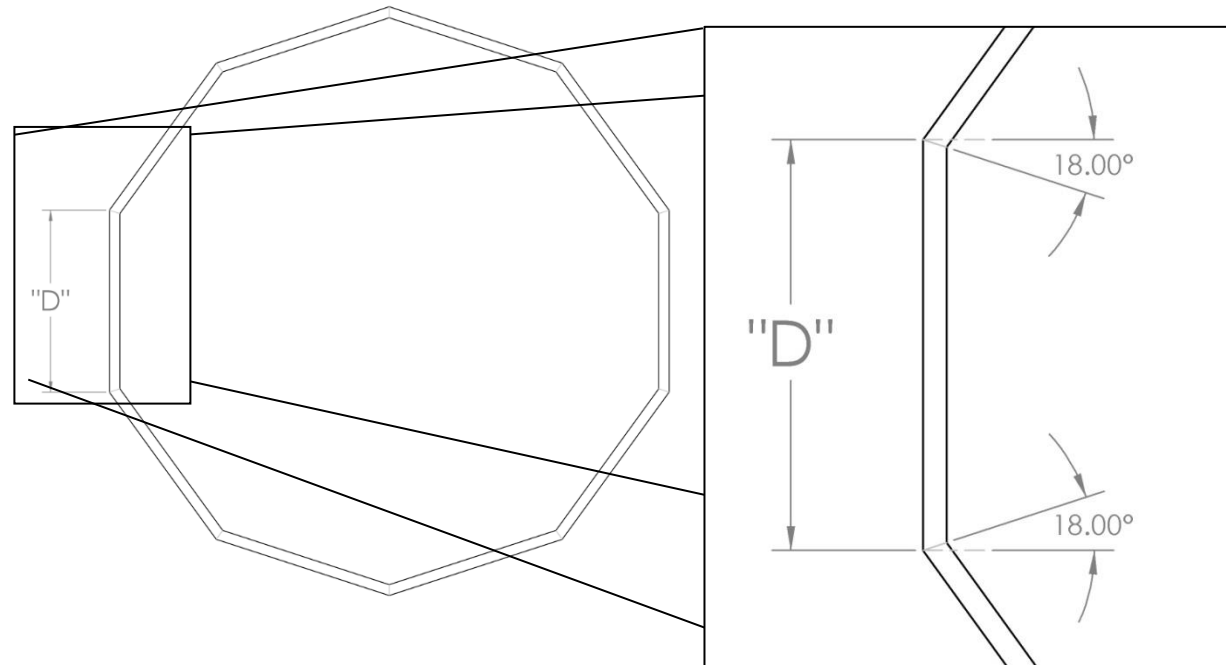

Strut Preparation

- Using the table to the right, find the diameter of the dome you are constructing in the first column. Then follow that number to the right to find the length of the “A” and “B” struts. The numbers are rounded to the nearest 1/16th of an inch.
- The quantity of each length of pipe is shown in the second row, 30 of strut A and 35 of strut B.
- Gather your strut material* and ensure that your saw is set to 90 degrees
- Cut the appropriate quantity listed in the second row of the table for each length, keep them separated into two piles.

**NOTE: check that the cut and uncut ends are free of staples, protrusions or anything that would prevent it from butting up to the hub connector.*

- Label the struts so that they can be easily identified, simply by scribing an “A” and “B” or apply spray paint (Yellow/Amber) for Strut A and Strut B are left blank) to both ends of the pipes while they are stacked.




2v		Strut A (inches)	Strut B (inches)
Qty		30	35
DOMe DIAMETER (feet)	8	24.125	27.5625
	9	27.375	31.25
	10	30.6875	34.9375
	11	33.9375	38.6875
	12	37.25	42.375
	13	40.5	46.0625
	14	43.8125	49.8125
	15	47.0625	53.5
	16	50.3125	57.1875
	17	53.625	60.9375
	18	56.875	64.625
	19	60.1875	68.3125
	20	63.4375	72.0625
	21	66.75	75.75
	22	70	79.4375
	23	73.3125	83.1875
	24	76.5625	86.875
	25	79.875	90.5625
	26	83.125	94.3125

Hub & Strut Location Identification

- The primary method for identifying the strut locations and assembly order is that each strut location has a colored mark located on it that identifies the type of strut to be used in that location. Locations where “A” struts go will have a yellow (Amber) mark; the locations where “B” struts go will be a blue mark.

Dome Frame Construction

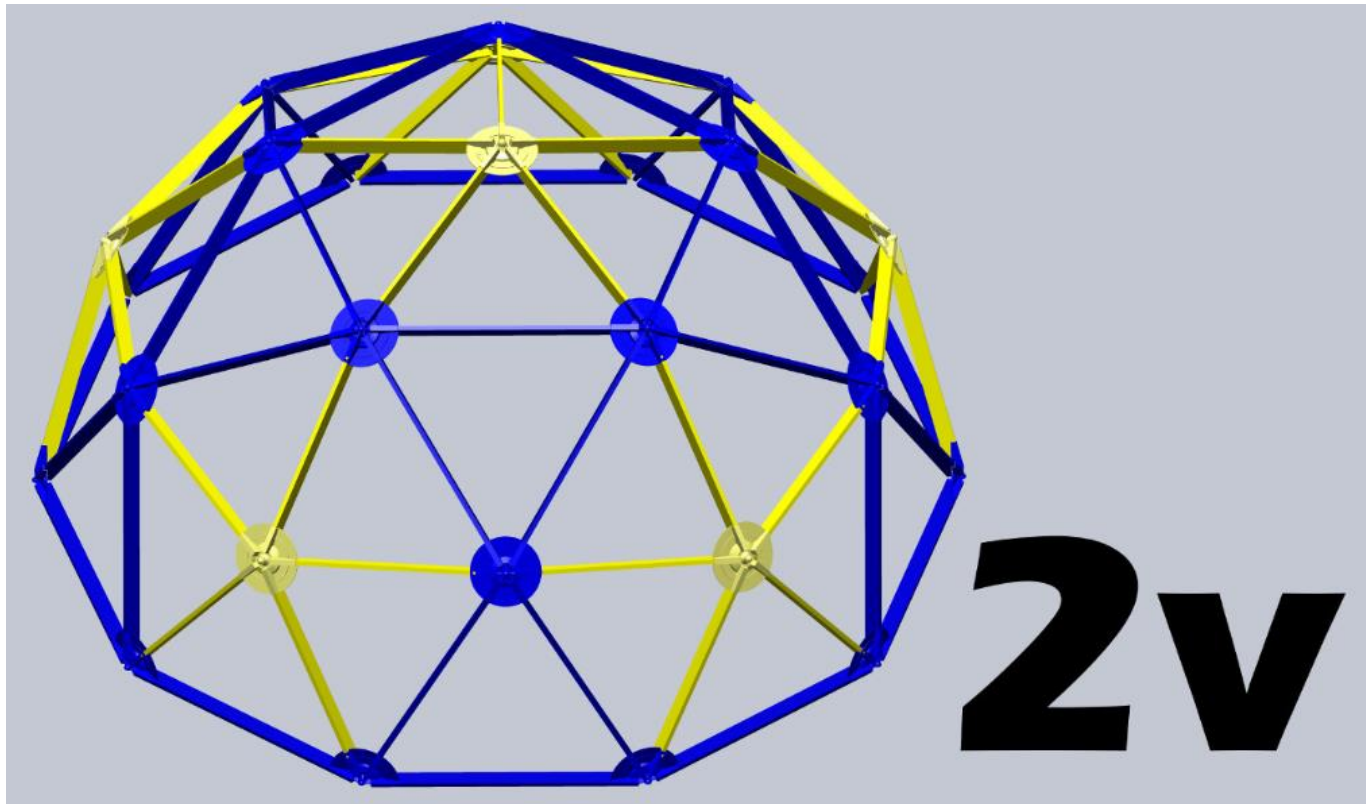

ILLUSTRATED LAYOUT PLAN

Natural Frequency
109 Ransom Ave
McLeod, ND 58057
www.geodesicdomekits.net


Instructions:

Special Considerations: *When mating a strut to a hub, always make sure that the end of the strut “bottoms out” in the hub strut slot, this ensures the correct dimensions are held throughout construction and will help with consistent panel sizing.*

1. Once the site is prepared and level, locate the middle of the site and drive a stake in until about 2” is visible above the ground. Place a screw in the middle of the stake leaving about ¼” of the screw above the top of the stake.
2. Map out the radius of the dome you are building by hooking a tape measure/string to the screw in the stake and stretch it out to the determined radius. Using some method (i.e. spray paint, scribe, etc) mark the site as you walk around keeping the tape measure/string taught. Complete marking all the way around creating a circle with the full diameter of the desired dome outside dimension.
3. Check that the scribed circle is correct by re-measuring several locations.
4. Choose a Base Row outside hub connector to begin with. Place the hub so that the outside of the hub lines up with the scribed line. **ALL hubs and struts should be in the INSIDE of the circle.**
5. Starting with either side of the hub, insert the first strut, matching the color (Base row is all B struts) on the hub to the matching colored strut, until it butts up.
6. Fasten with 2 opposing screws or bolts through the hub and pipe.

Note: If using the provided self tapping screws, it is important to not over tighten them if using PVC pipe. Over tightening may cause the pipe to strip and an inadequate fastening would result. If stripping becomes a consistent problem due to soft strut material, pre-drilling the hubs will help prevent it.


7. Then using the ILLUSTRATED LAYOUT PLAN above, choose the next hub (**Note: the base row hubs alternate between the H2v2A and H2v2B**), making sure the color markings match the strut, and that the orientation of the A strut is correct, and assemble and fasten it to the end of the strut.
8. Following the ILLUSTRATED LAYOUT PLAN and marked colors, continue adding hub connectors and struts, fastening as you go. Try to keep all hubs oriented in the same direction as the other similar hubs on that row. Continue around the circle, until you reach the hub you started with, completing the 1st horizontal or base row.

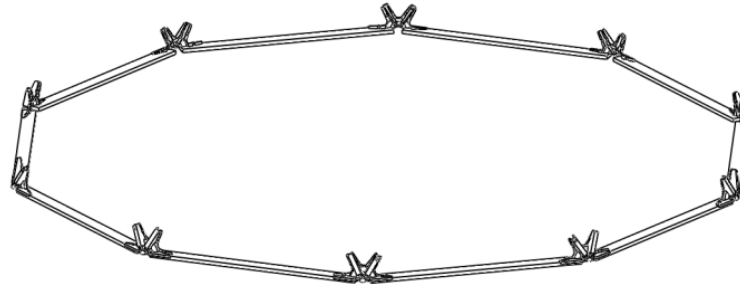


9. Using a tape measure, check that the hubs are all equal distance from the center stake, pushing or pulling the hubs into position as you go around.
10. If attaching to a riser wall, this is a good time to attach it. Utilize the best method based on the type of substructure and strut type. Some options are listed below. An anchor point should be positioned just outside the edges of each connector on both sides as well as the center of the strut between the two hub connectors.
 - a. Concrete – Pipe straps w/concrete screws/anchors
 - b. Riser Wall – Pipe straps
 - c. Ground –ground anchors, spikes, U-shaped rebar

NOTE: A good anchoring system is very important in developing the overall strength of the dome


11. Following the ILLUSTRATED LAYOUT PLAN and the colors on the connectors, insert the correct vertical struts from two base row hubs and join them with the correct hub
12. Continue around until all vertical struts are installed, joined with a hub and fastened.

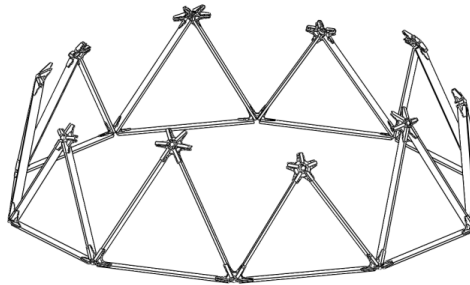

13. Insert the correct horizontal struts between the newly installed hubs and fasten to form the 2nd horizontal row.

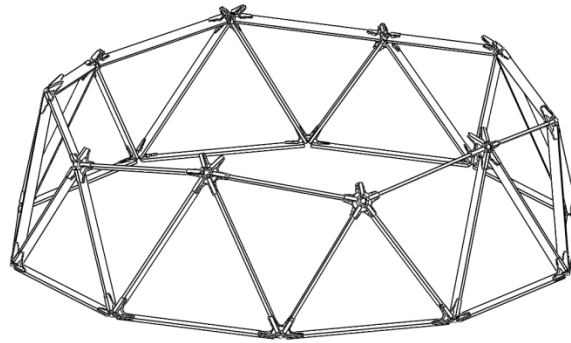


14. Continue to install the hubs and struts per the colors, fastening along the way. When necessary, support any hanging struts until both ends are supported so undue forces are not put on the connectors which may bend or break them. The true strength of a geodesic dome comes from the completed structure and care must be taken until all pieces are in place.

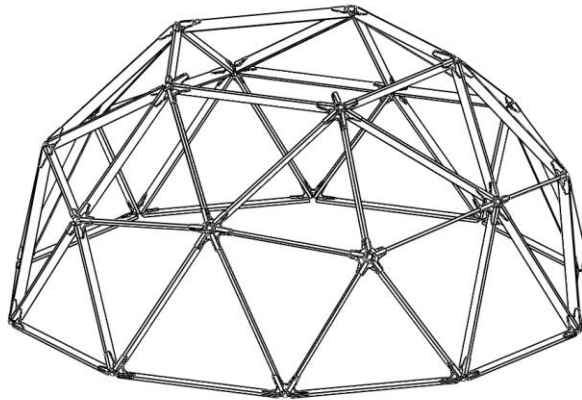

15. Once you've started to add the final 5 struts, fasten the top "keystone" hub to the first pipe and add each additional strut fastening along the way until the dome frame is completed. NOTE – On HD Pipe Dome Kits, the Keystone hub comes in two pieces and should be assembled around the top 5 struts then bolted through the holes provided in each web and lastly fastened to the pipes making sure they are butted up tight.



Natural Frequency
109 Ransom Ave
McLeod, ND 58057
www.geodesicdomekits.net

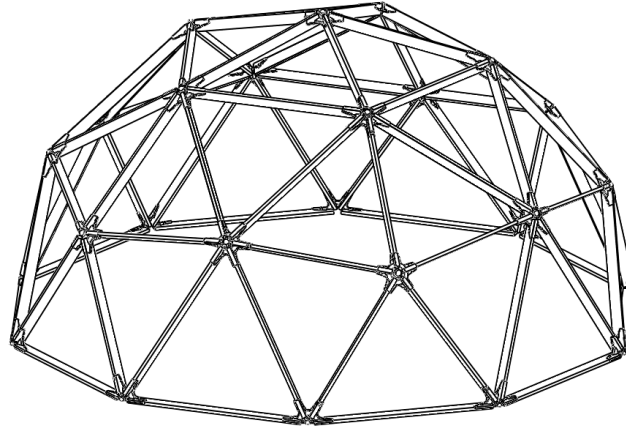

16. Check that all fasteners are tight.

17. Now is a good time to test fit the sheathing panels if utilizing any. **Refer to the Panel Guide below.** To ensure a correct fit, the panels should create an expansion/contraction gap and be sized so that the edge of each panel is kept approximately $1/16^{\text{th}}$ of an inch from the center of the strut. If they do not fit correctly, check that the strut lengths are correct and that the panel dimensions match the table. It is recommended that all panels be measured to fit each section prior to cutting.

18. Once all fasteners are installed, the dome is completed and can now be finished with covers, doors, etc to suit your application.

Sheathing Guide

There are many ways to cover a geodesic dome, a few of the more common are listed below with notes specific to their application on a Natural Frequency dome. This section acts as a guide to different methods and does not attempt to outline a “how to” process. There are a lot of great resources on this matter, it is suggested that once you have chosen a method, that you take the time to educate yourself on the process

- Plywood/Shingles
 - a. Using the Panel Guide included in this manual, cut a panel to test fit in the location to ensure a good fit. The same panel can be used in several locations to ensure that repeating the dimensions will provide a good fit.
 - b. Once you have confirmed that the panel is sized correctly, cut the allotted number of panels needed.
 - c. Position the panel and fasten it to the struts with pipe strap clamps
 - d. Repeat for the remaining panels
 - e. Once completed, shingle using a conventional process
- Shrink Wrap
 - Shrink Wrap is applied by draping the sheet over the dome structure and applying heat with a hand-held propane powered heat gun. Zipper doors, vents, fans and more can all be applied to the heat shrink plastic for a quick covering method.
- Tarp, Canvas, Screen
- Plexiglas/Polycarbonate Panels




Caution: When using a flexible cover like a tarp, canvas or film, ensure that it is pulled tight and cannot come loose. A loose cover can allow water to accumulate which could result in excessive weight on the dome in a manner unintended. If too much water is allowed to pool, the dome structure risks damage or collapse. Natural Frequency will not warranty any connectors which are damaged in this way.

www.geodesicdomekits.net

Natural Frequency
109 Ransom Ave
McLeod, ND 58057
www.geodesicdomekits.net

Paneling Guide




***As stated, this is meant to be a guide and all measurements should be checked on the actual structure prior to cutting material, variances in struts including twisting, bending and length as well as base row layout may cause the need for slight changes to the guide dimensions below or between individual panels.*

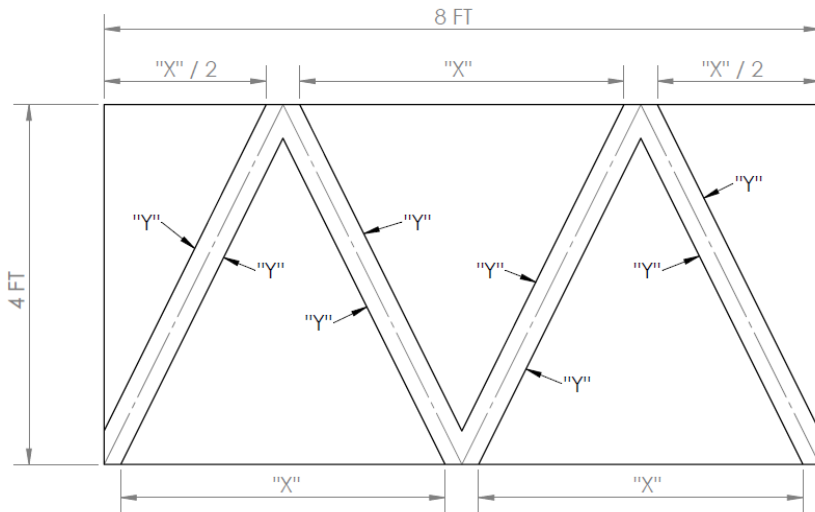

This guide outlines the general procedure of cutting the panel triangles used for a 3v Dome. Always account for overlap on the struts and an expansion gap between panels. As a general rule, the panel side dimension should be $2\frac{1}{8}$ " longer than the strut that it would be covering. Always check prior to cutting.

Using the methods depicted, a 4'x8' sheet of panel material (i.e. tongue & groove plywood, etc) you can yield from 1 to 3 Other methods and layouts are possible and may work better for in different applications.

The size of the dome will dictate whether you can use full panels as shown on the left, or will have to assemble panels from two halves as shown on the right.

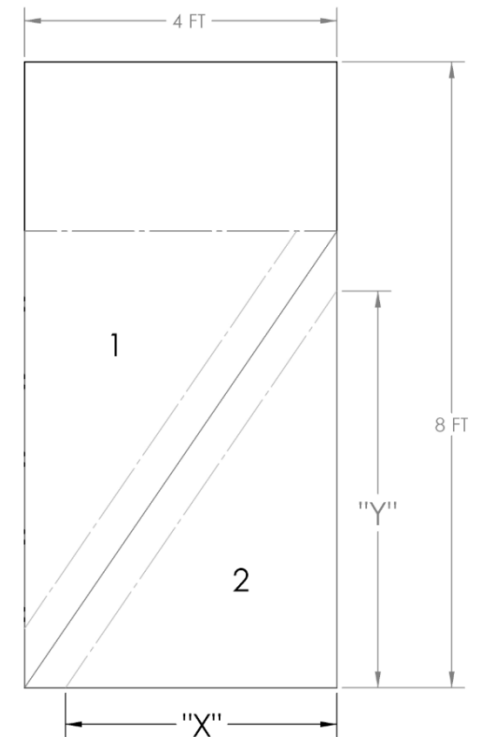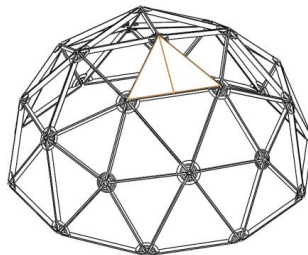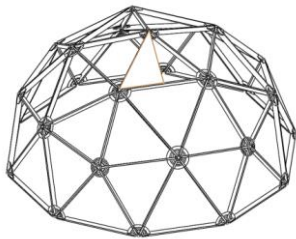

NATURAL FREQUENCY TERMS & CONDITIONS

1. PAYMENT, CANCELLATIONS, AND DELIVERY.

(a) Payment. Customer agrees to pay Natural Frequency according to these terms and conditions: 100% deposit due at time of Order.

(b) Cancellations. Cancellations may be made within 48 hours of time of Order. Any cancellation made after 48 hours of Order time will be subject to a minimum \$500 cancellation fee.

(c) Shipping & Delivery. Shipping and delivery is handled through a certified freight company. Product is packaged in a warehouse. Delivery details and information should be noted with your order if applicable

2. ORDERS. It is the customer's responsibility to make sure the Product you Order meets local codes or rules that may apply to your property. Orders are not binding upon Natural Frequency until accepted by Natural Frequency in writing or online, including facsimile and e-mail. Natural Frequency's acceptance of your Order is expressly conditioned upon your acceptance of the terms and conditions herein.

Any additional or different terms or conditions contained in your Order or in any other correspondence shall be of no force or effect, unless such terms and conditions are specifically agreed to in writing by Natural Frequency.

3. PRICES AND QUOTATIONS. Unless specifically agreed to in advance by Natural Frequency, all Product prices shall be Natural Frequency's list prices in effect at the time of its receipt of your Order (the "Price"). The Price does not include sales or other taxes, if applicable. In addition to the Price, you agree to pay (either directly to the appropriate governmental entity or to Natural Frequencies) any sales or other tax due under any applicable law.

4. DIY. (Do-It-Yourself). As the name implies, DIY requires you to install the Product yourself. The Product does not include struts, covers, doors, windows, lighting, electrical, steps, etc. If you order a DIY kit, you are solely responsible for all necessary permits, architectural/engineering work, foundational work (including site preparation), lumber, other construction materials as well as the installation and assembly of the Product. You represent and warrant to Natural Frequency that you have building experience, including but not limited to carpentry, roofing, reading of architectural plans and manuals, and any other necessary related experience in the building and construction industry or that you will hire someone with such qualifications to install and assemble the Product. Natural Frequency accepts no responsibility and will not be liable for anything related to a DIY installation. You are solely responsible for obtaining all necessary building permits and complying with all applicable building and safety codes in the installation of the Product.

5. DELIVERY AND FORCE MAJEURE. Any and all shipping, and delivery are estimates only, and Natural Frequency does not guarantee that the Product will be shipped or delivered in accordance with such estimates. Without limiting the generality of the foregoing, Natural Frequency may delay delivery of the Product without any liability therefore as a result of any delay caused by events outside Natural Frequency's reasonable control. Natural Frequency's inability to obtain necessary materials, components, labor, or manufacturing facilities, or anything else that would in any way impair Natural Frequency's ability to deliver the Product in the quantities ordered at the prices quoted.

6. SHIPMENT AND TITLE. You are deemed to receive the Product when you pick up the Product from Natural Frequency's warehouses or upon delivery of the Product to your delivery address. Natural Frequency shall bear all risk of loss and casualty to the Product until such time as the Product has been received or deemed to be received by you. You shall bear all risk of loss and casualty to the Product upon and after the Product has been received or deemed to be received by you. If the Product is delivered to your delivery address, you are solely responsible for and will insure against loss or casualty incurred during and after the unloading process at such location. You are solely responsible to inspect the Product upon receipt for any damages incurred during shipping before signing off with the delivery service. Upon delivery, you are solely responsible for the Product and any and all costs associated with the Product.

7. RETURNS. Product may be returned only with the prior written authorization of Natural Frequency, in Natural Frequency's sole discretion. A return authorization number will be assigned to you by Natural Frequency if Natural Frequency authorizes a return. The return authorization number must be marked on the shipping container for the Product being returned. Any Product so returned shall be subject to a restocking fee of at minimum of 30% of the purchase Price. You shall bear the risk of loss during shipment with respect to any such returned Product and shall be responsible for insuring the Product for its purchase price. Any Product returned to Natural Frequency without prior authorization shall be returned to you, freight collect. Natural Frequency may place in storage any Product for which shipment is delayed by your inability or unwillingness to pay for and receive the Product. Such storage by Natural Frequency shall be for your account at your expense, and the Product so stored shall be at your risk while stored.

8. LIMITED WARRANTY. Natural Frequency warrants to the original purchaser of the Product that, should there be any defects in the material or workmanship during the initial 12 months (one year) from your receipt of the Product, Natural Frequency will repair or replace the defective component(s) at its option. You must notify Natural Frequency of any claim of defects in the material or workmanship within 12 months (one year) after your receipt of the Product. Said notice must be in writing, set forth specifically the basis for the claim, and include a photograph of the defect(s). The failure to satisfy the requirements above will constitute irrevocable acceptance of the Product. All warranty claim notices should be sent to Natural Frequency, attention to General Manager, 107 Ransom Ave, McLeod ND 58057. This warranty gives you specific legal rights. (You may also have other rights which vary from state to state). Failure to follow the Construction Manual or any related instructions, and any abuse or misuse of the Product including unauthorized alterations, will void this Limited Warranty. Natural Frequency is not responsible for damage caused by the location of the Product on or over inappropriate soils or terrain or by the use of improper replacement parts. Natural Frequency assumes no responsibility and expressly disclaims all liabilities for damages due to misuse, neglect, improper maintenance or adjustments, and normal wear and tear of the Product. Natural Frequency reserves the right to change and/or improve the design and/or specifications of the Product without notice or obligation to modify previously produced units. No installation or other instructions, advice, Product information, or marketing materials, whether oral or

written, obtained by you at any time from Natural Frequency or any vendor or retailer of Natural Frequency Products shall create any Natural Frequency express warranty not expressly stated in this Section.

NATURAL FREQUENCY MAKES NO EXPRESS WARRANTIES EXCEPT AS STATED IN THIS SECTION. ANY AND ALL EXPRESS OR IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL TERMINATE THREE HUNDRED SIXTY FIVE (365) DAYS FROM YOUR RECEIPT OF THE PRODUCT. (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.)

9. THE PRODUCT IS NOT DESIGNED OR INTENDED TO BE USED AS A RESIDENCE OR DWELLING. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT THE PRODUCT IS NOT DESIGNED OR INTENDED TO BE USED AS A RESIDENCE OR DWELLING. USE OF THE PRODUCT AS A RESIDENCE OR DWELLING MAY RESULT IN LOSS OF PROPERTY AND/OR SERIOUS INJURY. ANY USE OF THE PRODUCT AS A RESIDENCE OR DWELLING SHALL TERMINATE ANY AND ALL WARRANTIES HEREUNDER. YOU EXPRESSLY AGREE TO INDEMNIFY NATURAL FREQUENCY (PURSUANT TO SECTION 10 BELOW) FROM AND AGAINST ANY AND ALL DAMAGES, LIABILITIES, AND LOSSES ARISING FROM YOUR USE OF THE PRODUCT AS A RESIDENCE OR DWELLING.

10. INDEMNIFICATION. You agree to defend, with counsel approved by Natural Frequency, all actions against Natural Frequency, its officers, directors, managers, shareholders, members, employees, agents, beneficiaries, successors, and other representatives (the "Indemnified Parties") with respect to, and to pay, protect, and indemnify and save harmless all Indemnified Parties from and against, any and all liabilities, losses, damages, costs, expenses (including reasonable attorneys' fees and expenses), causes of action, suits, claims, demands, or judgments of any nature arising from or relating to the injury to or death of any person, or damage to or loss of property, caused by or incurred in connection with your use or misuse of the Product.

11. LIMITATION OF LIABILITY. IN NO EVENT SHALL NATURAL FREQUENCY BE LIABLE FOR LOST PROFITS, BUSINESS INTERRUPTION, LOST BUSINESS OPPORTUNITIES, OR ANY OTHER INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR RELATING TO THE THESE TERMS AND CONDITIONS OR YOUR PURCHASE OF PRODUCT (WHETHER IN CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE WHETHER ACTIVE, PASSIVE, OR IMPUTED), PRODUCT LIABILITY, STRICT LIABILITY, OR OTHER THEORY), EVEN IF NATURAL FREQUENCY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

IN NO EVENT SHALL THE AGGREGATE LIABILITY OF NATURAL FREQUENCY (WHETHER IN CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE WHETHER ACTIVE, PASSIVE, OR IMPUTED), PRODUCT LIABILITY, STRICT LIABILITY, OR OTHER THEORY), EXCEED THE PRICE PAID BY YOU TO NATURAL FREQUENCY

(Certain state laws do not allow the exclusion or limitation of certain damages. If these laws apply, some or all of the above exclusions or limitations may not apply to you, and you may have additional rights to those contained herein. In such states, Natural Frequency's liability is limited to the greatest extent permitted by law.)

12. TRADEMARKS AND TRADENAMES. You acknowledge and agree that all brand names, trade names, and trademarks incorporated onto or associated with the Product (collectively, the "Marks") purchased hereunder are the exclusive property of Natural Frequency and that you shall not acquire any rights in any of the Marks by purchasing the Product. You shall not make any use of the Marks at any time except as otherwise authorized in writing by Natural Frequency.

13. PROPRIETARY INFORMATION/NONDISCLOSURE. You acknowledge and agree that any knowledge or information, including drawings, designs, specifications, plans, and data, that Natural Frequency may have disclosed or may hereafter disclose to you incident to the placing and filling of an Order shall, at all times, remain the exclusive property of Natural Frequency, and you shall acquire no interest in, or right with respect to, such proprietary information unless otherwise stated in writing by Natural Frequency. You further acknowledge and agree that such proprietary information constitutes valuable, special, and unique business assets of Natural Frequency and that you shall not now or at any time in the future use any such information in any manner or disclose any such information to any person or entity, except as expressly permitted in writing by Natural Frequency.

14. GOVERNING LAW AND JURISDICTION. ALL MATTERS ARISING OUT OF OR RELATING TO THESE TERMS AND CONDITIONS OR YOUR PURCHASE OF PRODUCT SHALL BE GOVERNED BY THE LAWS OF THE STATE OF NORTH DAKOTA, WITHOUT REGARD TO CONFLICTS OF LAWS RULES. EXCLUSIVE JURISDICTION OVER AND VENUE OF ANY SUIT WILL BE IN THE STATE COURTS LOCATED IN RANSOM COUNTY, NORTH DAKOTA OR THE UNITED STATES DISTRICT COURT FOR THE DISTRICT OF NORTH DAKOTA LOCATED IN BISMARCK, NORTH DAKOTA.

15. ENTIRE AGREEMENT. These terms and conditions together with the Order constitute the parties' entire agreement relating to the subject matter hereof and supersede all prior or contemporaneous oral or written communications, proposals, and representations with respect to such subject matter. No modification to these terms and conditions will be binding unless in writing and signed by each party.

16. NO WAIVER. No waiver of any provision of these terms and conditions or delay by either party in enforcement of any right hereunder shall be construed as a continuing waiver or create an expectation of non-enforcement of that or any other provision or right.

17. SEVERABILITY. In the event any provision herein should be held unenforceable by a court of competent jurisdiction, such court is hereby authorized to amend such provision so that it will be enforceable to the fullest extent permitted by law, and all remaining provisions shall continue in full force without being affected, impaired, or invalidated thereby in any way.

18. NO ASSIGNMENT. You agree that you may not to assign or transfer any of your rights arising out of or related to these terms and conditions or your purchase of Product.

19. ATTORNEYS FEES. You agree that if you fail to timely pay to Natural Frequency any sums due hereunder and Natural Frequency sues to collect such sums, you will be liable for reasonable attorney's fees so incurred by Natural Frequency

I hereby agree to order the Product at the stated costs and have read and agree to the TERMS AND CONDITIONS, incorporated herein under this reference. I understand that Natural Frequency reserves the right to change, discontinue or substitute materials. I understand that the Product delivered will consist of all hub connector parts and pieces, as well as fasteners, but does not include any foundational work, struts, covers, doors, windows, lighting, electrical, steps, etc. from Natural Frequency or its delivery personnel, unless otherwise stated.



Natural Frequency
109 Ransom Ave
McLeod, ND 58057
www.geodesicdomekits.net